

Cyclopital3D

Auxiliary Lens Adapter for FujiFilm FinePix Real3D W3



**Enables the use of 37mm lens hoods,
wide-angle or fish-eye lenses
with the Fuji W3!**

The Cyclopital3D Auxiliary Lens Adapter allows you to use wide angle or fish eye auxiliary lenses with your Fuji W3 or W1.

3D photos shot with a wide field of view can produce interesting results. The functionality is particularly useful when you can't back up enough to get everyone or everything in the picture. For example, the two photos below were taken with the tripod in the same location, the 1st with the stock Fuji W3 and the 2nd with fish-eye lenses attached to the Cyclopital3D Auxiliary Lens Adapter:



Benefits and Features:

- 37mm lens rings enables use with wide-angle and fish-eye lenses
- Hot shoe mount, PC port & trigger for external flash
- Tripod mount
- Convenient hand grip is easy to hold
- Neck-strap anchors fit 3/8" or 10mm strap width
- Built in spirit level
- Precision laser alignment

Instructions for use:

1. Slide lens cover open.
2. Insert camera into adapter.
3. Attach to camera by inserting thumb screw into the tripod mount.
4. Turning your camera on (and off). If the camera is off, press and hold the “play” button in the middle of the control panel. The camera will power up in playback mode, switch to camera mode by half pressing the shutter button. To turn the camera off, press the play button once which will return it to playback mode, then press and hold the play button until camera turns off.



The adapter can also be used with lens hoods for reducing glare and improving contrast:



When using a flash:

- The flash hot shoe will accommodate almost any kind of flash unit that has a hot shoe adapter.
- The camera must be set to “forced flash”.
- Red-eye removal mode must be OFF.
- Set the camera to manual mode, set ISO, aperture and shutter speed to appropriate values for the lighting making sure that the flash is set with identical values.
- It is recommended to use the flash in auto mode, with the same values as your camera.
- Note: because an additional battery is not needed to power the flash control unit, it does not work with some older, high voltage flash models. A list of known compatible flash models is being updated continuously and is posted at www.cycloptical3d.com.

Expand the Potential of your Fuji W3!

Close-up/ Macro Adapter

Decreases stereo base to 25mm!



Base Extender

Increases stereo base to 225mm!

Perfect for wildlife, landscapes and band or wedding photos.



All rights reserved, Cycloptical3D, Inc. 2010